



TOP Server V6

Activation and Licensing Procedures – Hardware Key

Software Toolbox
International Corporate
Headquarters, USA

148A East Charles Street
Matthews, NC 28105 USA
www.softwaretoolbox.com

TOLL FREE: 888-665-3678
GLOBAL: 704-849-2773
FAX: 704-849-6388





Table of Contents

Introduction 3

Information Needed 3

 All Support..... 3

 Hardware Licensing 3

 Hardware License Support Renewal 3

Hardware Key Licensing 4



Introduction

The following document outlines the proper procedure for registering the TOP Server V6 Hardware Key. This is a step-by-step explanation on how to: register your new TOP Server V6 Hardware Key.

Information Needed

In order to successfully complete any of the procedures outlined in this document you will need several pieces of information. This section will discuss what information you will need and where to find it.

All Support

- **Serial number:** is a unique number and will never change.
- **Hardware Key ID:** is a unique number that can be found in your product delivery email or on the back of the hardware key itself.

Hardware Licensing

- **Hardware Key License File:** is available by clicking on the link provided in step 2 of the Registration and Installation Instructions section of the Software Toolbox Product Delivery email for the hardware key purchase.


Hardware License Support Renewal

- **Hardware Key ID:** will be necessary to complete Support Contract Renewals. This number can be found on the back of the hardware key and also in the Software Toolbox Delivery of Product email. In the Software Toolbox Software delivery email, the "Maintenance/Support expires" item will tell you for how long your current support contract will be valid.




Hardware Key Licensing

1. In the Software Toolbox Product delivery email please download the *.lic file
2. You will need to make sure this file is on the host machine if you did not download the *.lic file on the host machine. We recommend zipping the file and moving it with a USB drive.
3. Make sure your hardware key is inserted in the machine you want to license
4. Go to Start > All Programs > Software Toolbox > TOP Server 6 > **License Utility**
 - a. Alternatively use the Windows Search Feature to open the License Utility by searching for 'License Utility'

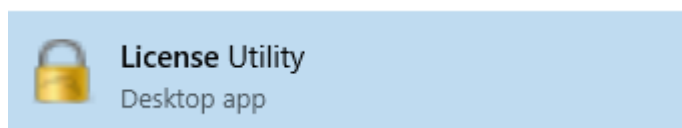

5. Click Activate
6. Select **I have a hardware key license file**

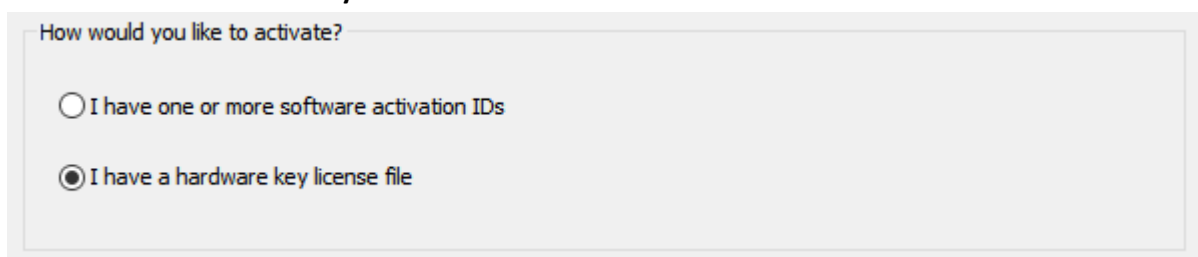


How would you like to activate?

☐ I have one or more software activation IDs

☒ I have a hardware key license file

7. Then click **Import File** and select your *.lic file

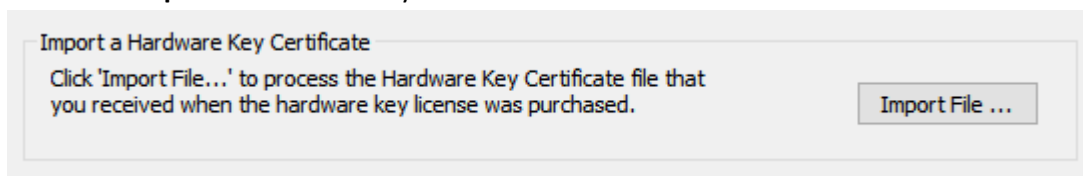

Import a Hardware Key Certificate

Click 'Import File...' to process the Hardware Key Certificate file that you received when the hardware key license was purchased.

Import File ...

8. Once opened your TOP Server V6 should be licensed with the hardware key.

Notes:

- You will need to keep the license file in a safe location in the event that you need to relicense the TOP Server in the future, such as after a hard drive failure or a computer upgrade.
- A driver that is licensed with the hardware key will show a N/A in the Activation ID field. The type field will show that this is a hardware license. The notes field will contain the hardware key ID.

