Using TOP Server with Windows Terminal Services

The TOP Server will work with Windows Terminal Services (MSTS - Remote Desktop is a form of this). The TOP Server will install as a <u>System Service</u> which can be accessed through the configuration user interface and the <u>offline editing</u> feature. Using the <u>offline editing</u> ability you can modify a configuration in Configuration Mode and load it by connecting to the server component running in the background. You will need to be in Runtime Mode to be able to view the <u>Diagnostics</u>. This will let you view the Event Log as well as the Configuration while the Server is running.

See the Administration Settings (shown below) to view the port setting for connecting the Configuration Mode to the Runtime Mode. You can use this setting to determine if you need to open the port in a fire wall or change it as needed.

You get to the TOP Server Settings by Right Clicking

at the bottom right of your Desktop and choosing

Settings from the pop up menu. If you don't see the

Administration Icon, go to the desk top Start Menu - All

Programs - Software Toolbox - TOP Server 6 - TOP

Server 6 Administration. The Administration Icon
shown will then appear.

